SOUNDFREAQ®

*Hi,*
*let's get*
*started.*

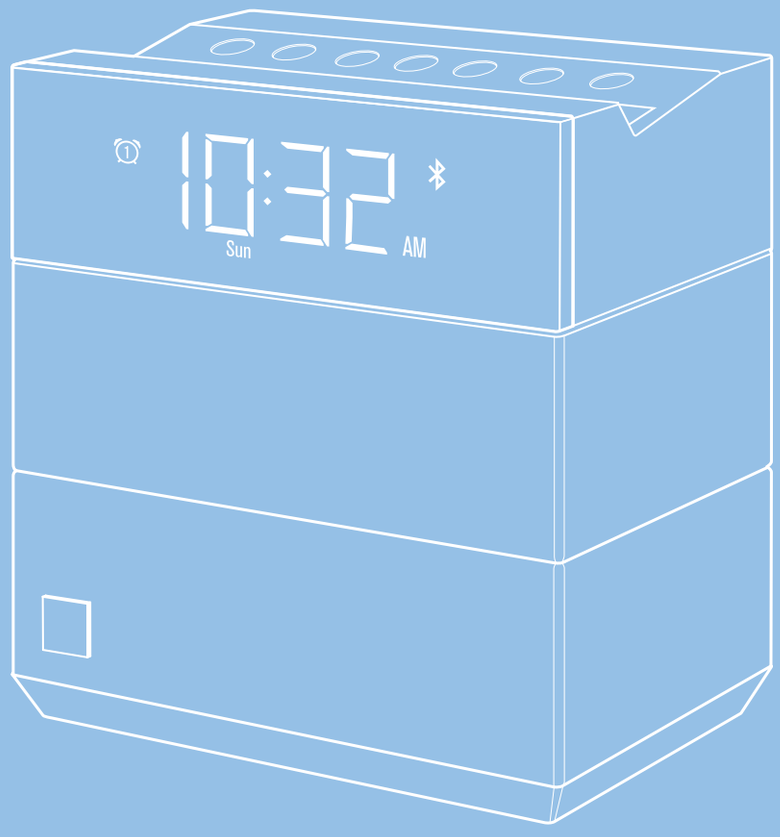


# Sound Rise

Wireless Speaker & Alarm Clock

WELCOME
— TO —
HAPPY
Listening

*Welcome to your new Sound Rise!*

We created Sound Rise for music lovers like you. Start the day with your favorite tunes, rock out while getting ready to go and relax with music as you fall asleep. Here are some helpful tips to get you started.

*Enjoy.*

*Meet our whole family of award-winning wireless speakers.*

soundfreaq.com

*We're here to help.*

If you need a hand with setup or have a question visit us at:

support.soundfreaq.com

or give us a call at

1-800-459-6369

M-F 9-5 EST

facebook.com/soundfreaq

twitter.com/soundfreaq

pinterest.com/soundfreaq

instagram.com/soundfreaq

*A new song everyday.*

Hand-picked tracks and playlists
from our team. Come take a listen.

songs.soundfreaq.com

| | | |
|---|---|---|
| Bluetooth / Line In / Radio | Music source | Indicates music source when speaker is on as Bluetooth, Aux Line In or FM Radio |
| WKDY Weekday / WKND Weekend / ALL Everyday | Alarm frequency | Indicates if alarm is set for weekdays, weekends or everyday. Alarm can also be set for a specific day of the week as well |
| ① ② | Alarm | Displayed when alarm is set to go off |
| ZZZ | Snooze | Displayed when alarm is snoozed |
| | Backup battery | Displayed when backup battery is low |
| WARM BRIGHT | Tone control | Indicated tone selection, when neither is displayed, tone is set to “flat” mode |
| | Chime | Indicates when alarm wake up sound is the internal chime |



# Getting to know Sound Rise

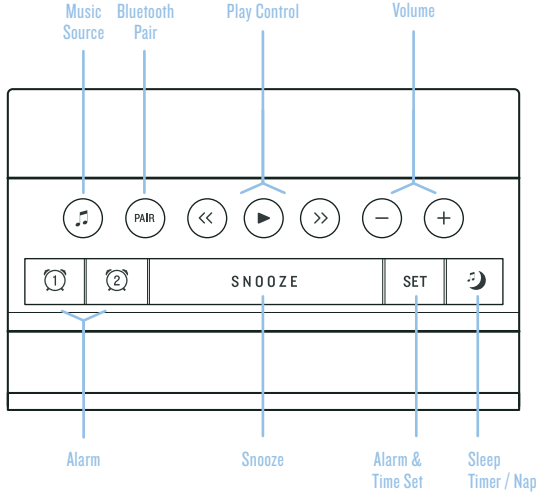

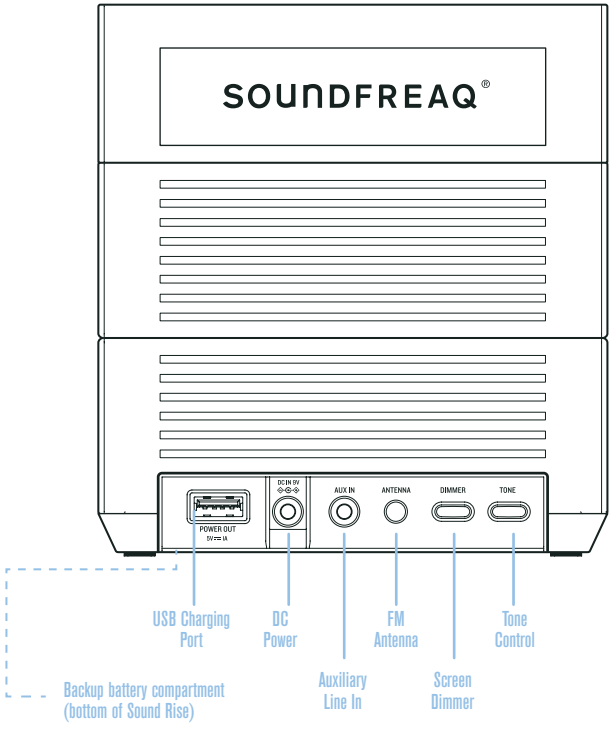


# Getting to know Sound Rise

**USB Charging Port** — Connect to charge a phone, tablet or other device with 5V / IA of power. Use the USB charging cable provided with your device.

**DC Power** — Port to plug in the DC power adapter included with your Sound Rise.

**Auxiliary Line In** — Connect any device with a standard headphone jack using a Line in cable (not included) to listen to audio.

**FM Antennae** — Connect the external FM antenna (included) for improved reception.

**Screen Dimmer** — Press to select the preferred screen brightness. When screen brightness is off, tap any button to momentarily display the time.

**Tone Control** — Press to select your preferred sound equalization tone for audio playback: flat (default), warm or bright.

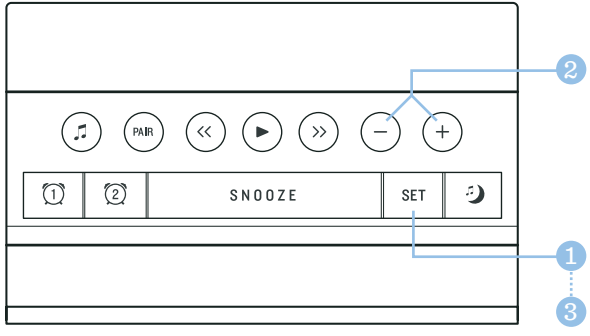


# Setting the Time

1. Press and hold **SET** button for 2 seconds until the hour starts blinking.
2. Press the +/– buttons to adjust the hour.
3. Press **SET** button to confirm the hour.
4. Repeat steps 2 and 3 to complete setting the time.
   The time setting options are:

   - Hour
   - Minute
   - AM/PM
   - 12 or 24 hour time display
   - Day of the week

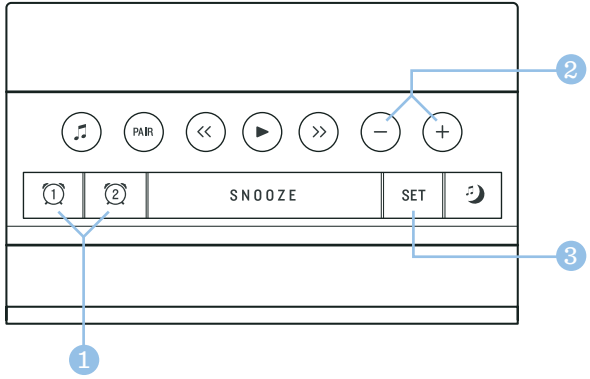


# Setting the Alarm

1. Press and hold **Alarm 1** ⏰1 or **Alarm 2** ⏰2 button for 2 seconds until the hour starts blinking.
2. Press the +/– buttons to adjust the hour.
3. Press **Set** button to confirm the hour.
4. Repeat steps 2 and 3 to complete setting the alarm. The alarm setting options are:
   - Hour
   - Minute
   - AM/PM
   - Day of the week (everyday, weekends, weekdays or a specific day of the week.)
   - Wake up sound (Bluetooth, FM radio, Line in or built-in chime)
   - Wake up sound maximum volume

*Note: To wake up to music from your phone or other device, you must first pair Sound Rise.*

*Note: When waking up to Bluetooth, Sound Rise will "play" the current song on your connected device. If your device is not available when the alarm goes off, Sound Rise will wake you with its built-in chime.*

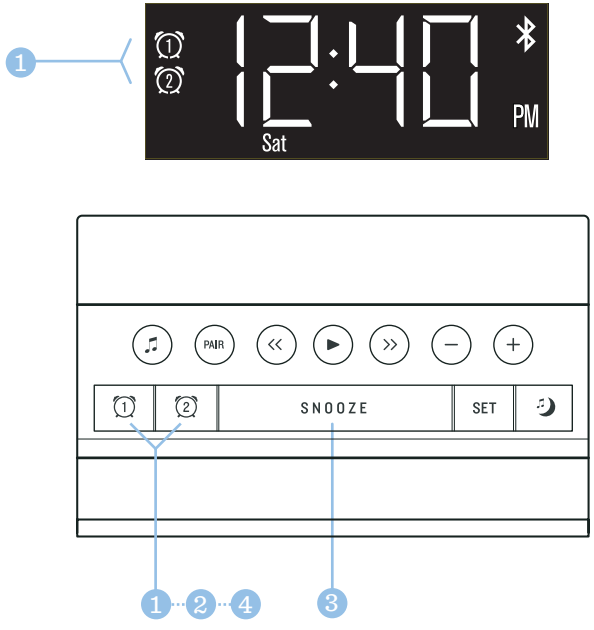


# Using the Alarm

1. Press **Alarm 1** ① or **Alarm 2** ② button and the alarm settings will be displayed and the alarm will be turned on. When the alarm is on, the **Alarm 1** ① or **Alarm 2** ② icon will be displayed.
2. When the alarm goes off, press and hold **Alarm 1** ① or **Alarm 2** ② to turn the alarm off for the day.
3. If you prefer to get some more sleep after the alarm goes off, press **SNOOZE** and the alarm will go off and ZZZ will be shown on the display. The default snooze time is 10 minutes. Press the snooze button repeatedly to set the snooze time to 20 > 5 > 10 minutes. While alarm is being snoozed, tap the **SNOOZE** to see the remaining snooze time.
4. To turn the alarm off, press the **Alarm 1** ① or **Alarm 2** ② button until the icon is not shown (the display will briefly display “OFF”).

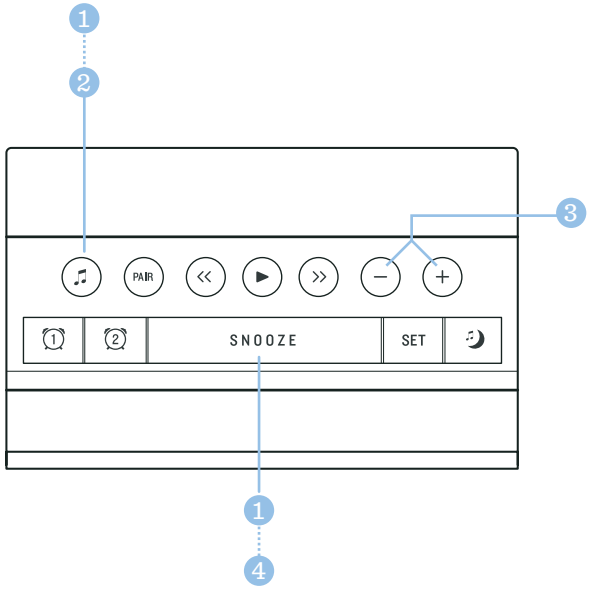


## Using the Speaker

1. Press **SNOOZE** button or ♫ to turn the speaker on.
2. Press ♫ to select the audio source:
   - Bluetooth
   - FM Radio
   - Line In
3. Press + / - to set the volume.
4. Press **SNOOZE** button or hold the ♫ for 2 seconds to turn the audio off.
5. Press the **TONE** button on the back of Sound Rise to select your preferred sound equalization tone for audio playback: flat (default), warm or bright.

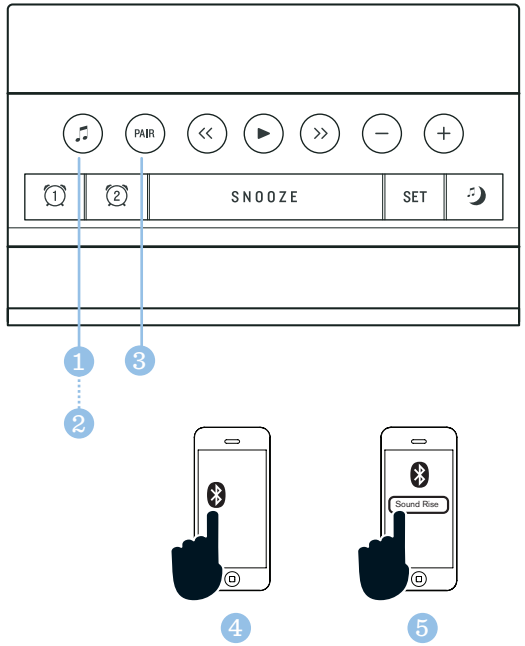


# Bluetooth Pairing

1. Press the Music ♫ or **SNOOZE** button to turn on the system.
2. Press the Music ♫ button repeatedly until ᛒ appears on the display to select Bluetooth mode.
3. Press **PAIR** on Sound Rise to start pairing mode. The Bluetooth icon on Sound Rise's display will flash rapidly.
4. On your phone, tablet or computer, open your Bluetooth settings menu to detect available devices. Once Sound Rise is detected, select it from the list of available devices to connect.
5. On iPod, iPhone and iPad devices tap to select "Sound Rise" from the list of devices in Bluetooth settings.

To pair another device, simply repeat the pairing process with steps 1 and 2 from Pairing Section. To re-connect a device that has already been paired, press and hold PAIR button on Sound Rise and select "Sound Rise" from your Bluetooth settings menu on your phone, tablet or computer. On most devices, no password is needed to pair, however, if a password is requested the default password is "1234".

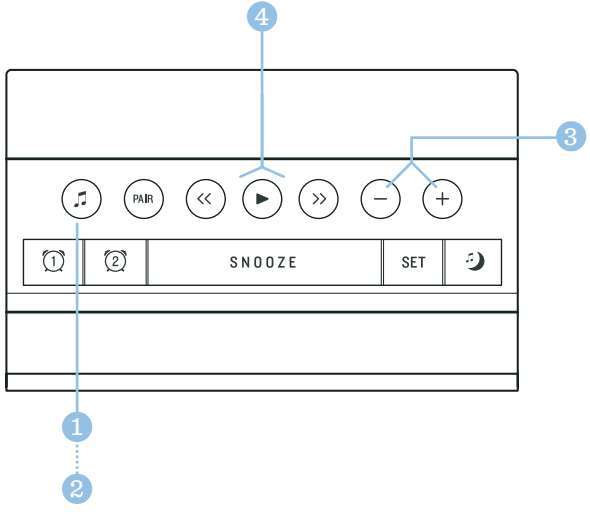


# Listening via Bluetooth

1. Press the Music ♫ or **SNOOZE** button to turn on the system.
2. Press the Music ♫ button repeatedly until ᛒ appears on the display to select Bluetooth mode.
3. You can change the volume by either using the volume buttons on Sound Rise or changing the volume on your paired device. For max volume, turn both volumes to maximum.
4. Use the Play Control buttons on Sound Rise to remotely control your connected devices and to play, pause and skip tracks.

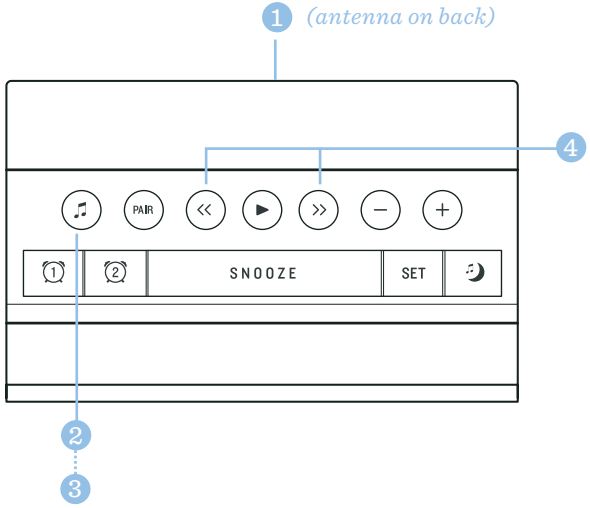


# Listening to the Radio

1. Connect the FM antenna to the antenna jack.
2. Press the Music ♫ or **SNOOZE** button to turn on the system.
3. Press the Music ♫ button repeatedly until FM appears on the display to select Radio mode.
4. Press the <</>> buttons to search a desired radio station for listening.

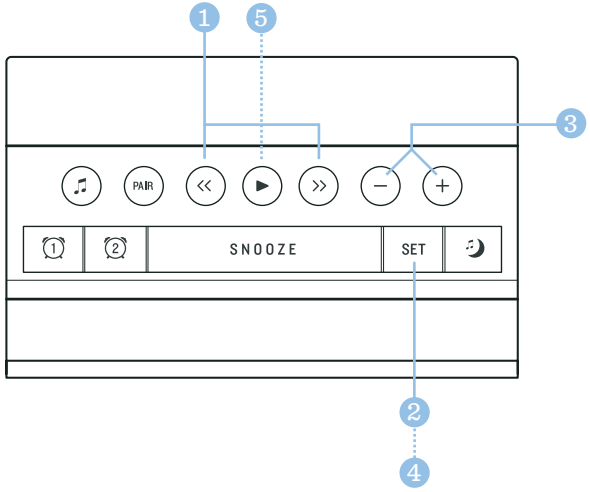


# Programming Radio Presets

There are six radio presets to save your favorite FM stations.
To save a preset:

1. Tune to the preferred station.
2. Press **SET**. The preset number will flash “P01”.
3. Press + / - to change the preset number.
4. Press **SET** to save the current station to the preset number selected.
5. To select a preset to listen to press ▶ to toggle through the preset stations. When a preset station is selected press **SET** to toggle between displaying the frequency and the preset station number.

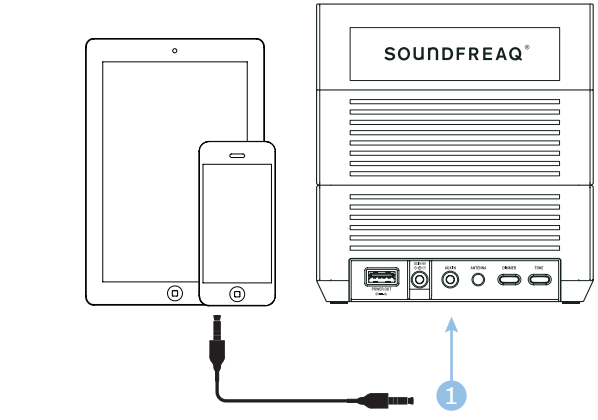


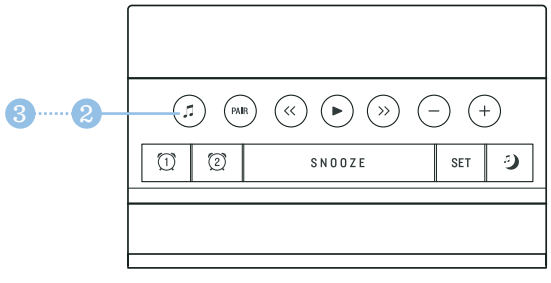


# Listening with Line In

1. Connect any device with a standard headphone jack using a Line in cable (not included) to the AUX IN on the back of Sound Rise.
2. Press the Music ♫ or SNOOZE button to turn on the system.
3. Press the Music ♫ button repeatedly until AUX appears on the display to select Line In mode.

*Note: For power conservation remove the line in cable when not in use.*

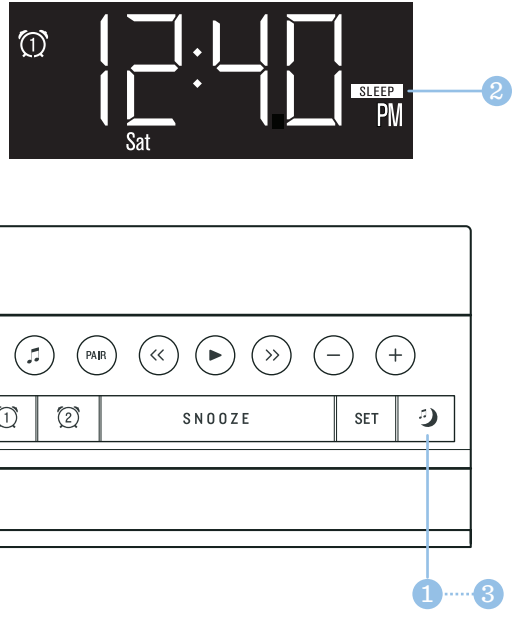


## Using the Sleep Timer / Nap

Use **SLEEP** button to set a timer to either listen to music while falling asleep or to set the nap timer.

*When* **SLEEP** *is selected while music is ON, the music will turn off at the end of the timer.*

*When* **SLEEP** *is selected while music is OFF, the nap alarm will go off at the end of the timer to wake you up.*

1. Press the **SLEEP** button repeatedly to set the timer duration: 15 --> 30, 60, 90, 120, OFF.
2. The sleep icon SLEEP will be shown on the display. When sleep is set for a nap, the sleep icon SLEEP will blink. When the time is displayed, tap sleep to briefly display the remaining time.
3. To turn the timer off, press sleep button repeatedly to select OFF. The sleep icon SLEEP on the display will turn off.

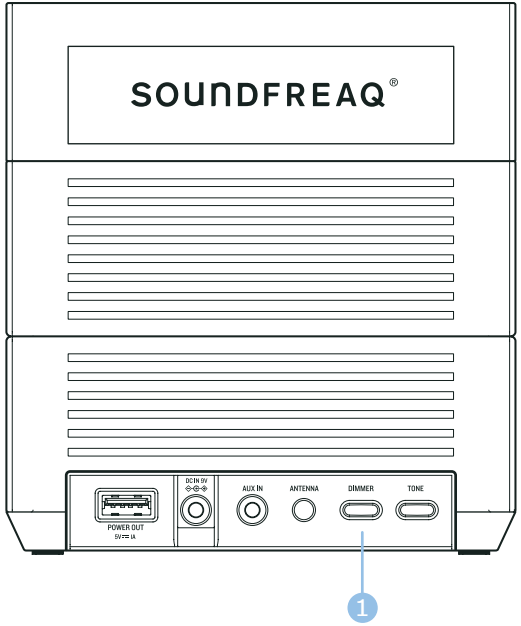


## Setting Screen Brightness

1. Press **DIMMER** on the back of Sound Rise to change the screen brightness.

2. When the screen brightness is off, press any button to momentarily turn the display on to see the time or operate any functions.

3. When the alarm goes off and the screen brightness is off, the display will automatically turn on. If **SNOOZE** is pressed, the display will turn off again until the alarm goes off again.

4. When the display brightness is off and an alarm goes off, the brightness will be turned on for the day. If you prefer to keep the screen brightness turned off even after the alarm has gone off, press + and - together and OFF will be displayed on the screen indicating “Black out mode”. To return to normal display brightness, press + and - together and ON will be displayed on the screen indicating “Black out mode” has been turned off.

   *NOTE: When audio is off, you can also press the **TONE** button or + / - buttons to change the screen brightness.*

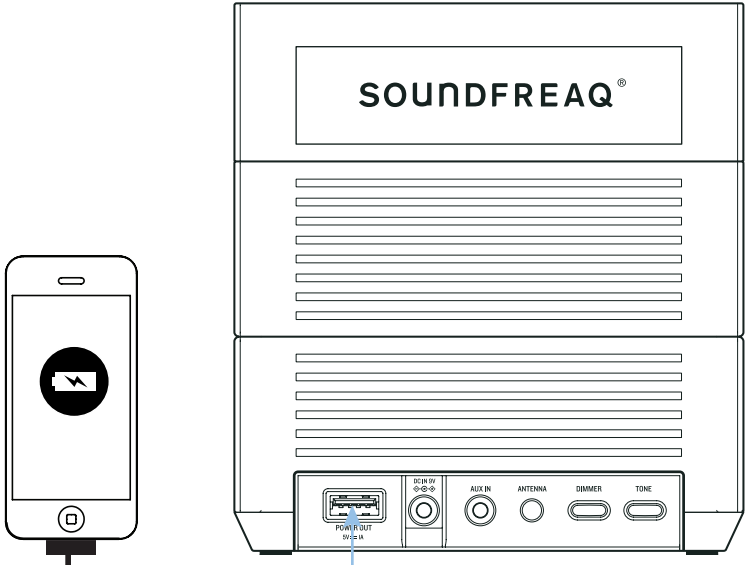


1 USB Phone Charging Port
*(Power out to charge phone)*

## Charging an External Device

1 You can charge most phones as well as other USB chargeable devices such as tablets, Bluetooth headsets and digital cameras directly from Sound Rise. Simply connect your device to the USB Port on the back of Sound Rise to begin charging.

*Note: Please use the charging cable that was provided with your device. The maximum charging output of Sound Rise is 5V / 1A.*

SOUNDFREAQ®

Sound Crafted
BY
MUSIC LOVERS

soundfreaq.com